

EP11B Single Infrared Emitter Visible-Blinking LED
EP12B Dual Infrared Emitter Visible-Blinking LED

 


P R O D U C T I N F O R M A T I O N A N D I N S T A L L A T I O N G U I D E


Description

1. Elegant, Compact Oval Shaped Transparent Housing
2. Infrared Circuitry Is Built Into The Transparent Housing
3. 10 Foot/3.0M Cable Terminated With A 3.5mm Plug
4. Integral Strain Relief Bushing Between Cable Diameter
5. Pressure Sensitive Adhesive Tape (PSA) For Easy Attachment On Any Hard, Clean and Dry Surface
6. Visible-Blinking LED Status Indicator

Diagram

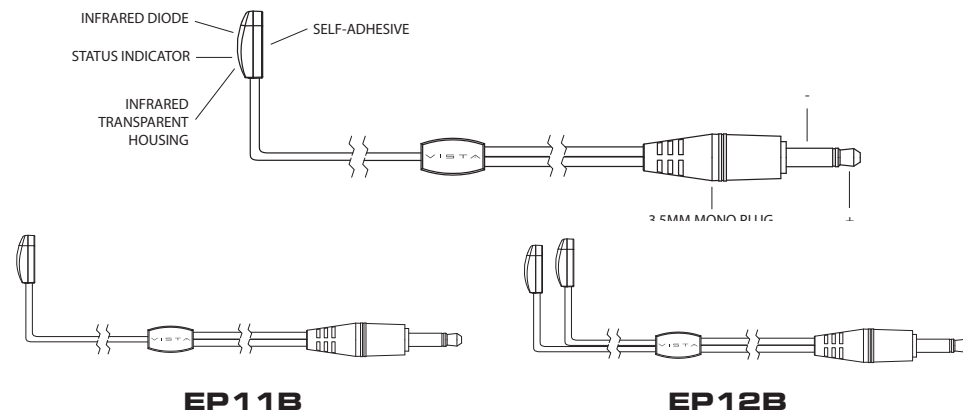


Installation

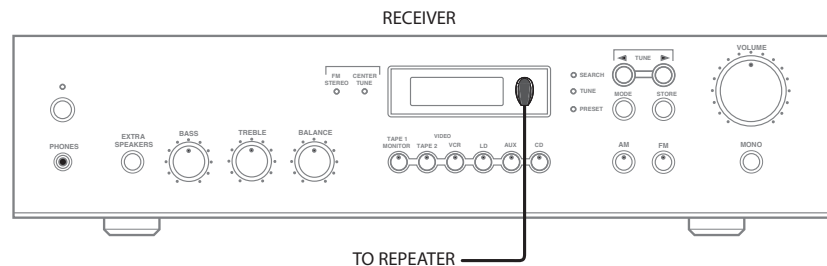 

Standard Installation


1. IR emitter (flat side) attached directly to IR sensor window
2. More reliable activation

IR Emitter Attached To The Shelf

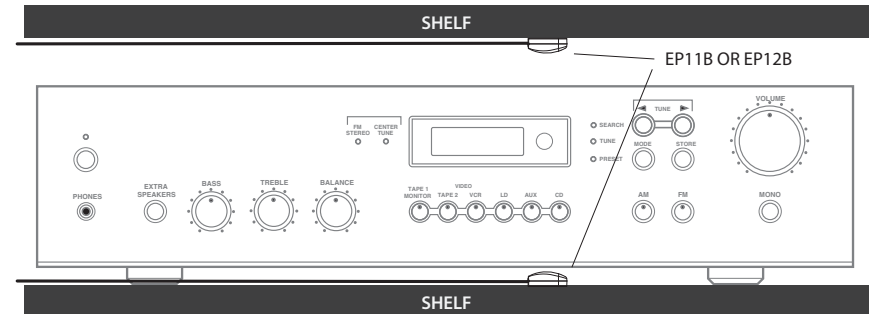

1. Attach IR emitter above or just below the IR window
2. Less reliable activation

Rack/Cabinet Door Installation

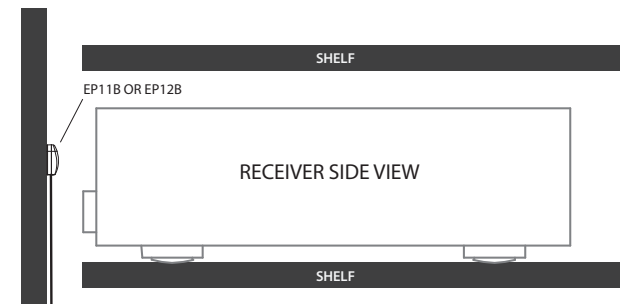

1. IR emitter is attached to rack door, round shape side facing the IR window
2. Less reliable activation

Note:

1. Be sure the mounting surface is clean and dry to ensure proper attachment.
2. Do not connect the IR emitter directly to a power supply or battery. You must use a Vista connecting block.