

EP11 Single Infrared Emitter Non-Visible
EP12 Dual Infrared Emitter Non-Visible

 


PRODUCT INFORMATION AND INSTALLATION GUIDE

Description


1. Elegant, Compact Oval Shaped Transparent Housing
2. Infrared Circuitry Is Built Into The Transparent Housing
3. 10 Foot/3.0M Cable Terminated With A 3.5mm Plug
4. Integral Strain Relief Bushing Between Cable Diameter
5. Pressure Sensitive Adhesive Tape (PSA) For Easy Attachment On Any Hard, Clean and Dry Surface

Diagram

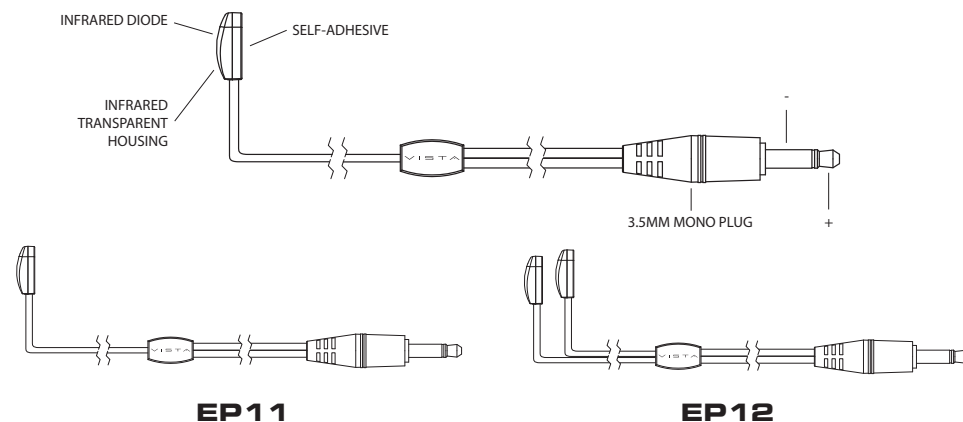


Installation

 Standard Installation

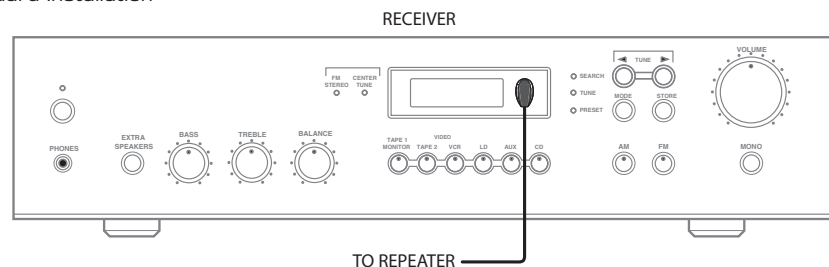


1. IR emitter (flat side) attached directly to IR sensor window
2. More reliable activation

 IR Emitter Attached To The Shelf

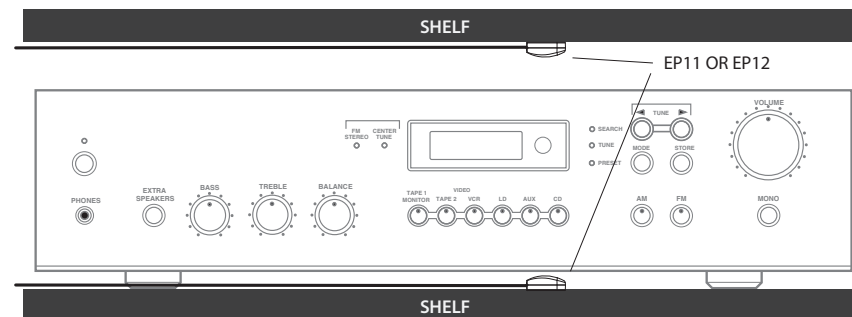

1. Attach IR emitter above or just below the IR window
2. Less reliable activation

 Rack/Cabinet Door Installation

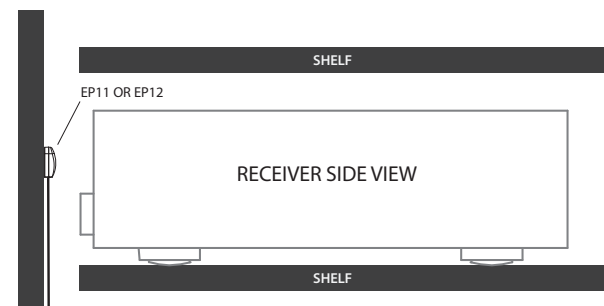

1. IR emitter is attached to rack door, round shape side facing the IR window
2. Less reliable activation

Note:

1. Be sure the mounting surface is clean and dry to ensure proper attachment.
2. Do not connect the IR emitter directly to a power supply or battery. You must use a Vista connecting block.

In North America contact:
Trends Electronics International Inc. - 100 - 980 West 1st Street. North Vancouver, B.C. V7P 3N4
Phone: 1 (877) 946-9255 Fax: 1 (800) 618-7363 Email: orders@trendsinc.com