

## Bazooka ATV-TUBE Troubleshooting Guide

Thank you for choosing a BAZOOKA product. We are committed to insuring your enjoyment of our products. Most of the issues relating to the ATV-TUBES are easily resolved, so we have put together this quick Troubleshooting Guide of the most common questions and issues relating to the ATV-TUBE products. Hopefully, this will help you resolve any issues you are experiencing with your ATV-TUBE and get you back to enjoying your music again.

### Sympton:

ATV-TUBE will not power up.

The ATV-TUBE's blue LED does not illuminate and unit does not turn on.

### Solution:

Check to make sure the SAE plugs are pushed together all the way.

Check for a loose connection at the battery.

Check the inline fuse in the main battery power cable

### Symptom:

ATV-TUBE bluethooth is paired but no sound.

The ATV-TUBE's LED is illuminated and it is paired to a mobile device, but there is no sound.

### Solution:

Check the volume setting on the mobile device to insure it is turned up.

Press and hold the volume button on the ATV-TUBE until you hear a beeping sound. This indicates the volume is at the max level up or down. Make sure you are pressing the volume up button. (▶▶▶)

Press the mode button  to insure the ATV-TUBE is in Bluetooth mode. When the LED is a solid BLUE the unit is in Bluetooth mode. When the LED is BLUE with a RED halo it is in Aux Input mode. You may need to switch the mode from Bluetooth to Aux and back to Bluetooth a few times and retry again

### Symptom:

Constant beeping sound..

The Bluetooth module beeps when the unit reaches either the Minimum volume setting (volume on the ATV-TUBE is turned all the way down) or the Maximum volume setting (volume on the ATV-TUBE is turned all the way up). If your unit is constantly beeping this could indicate that the volume up or down buttons could be stuck on the unit or the remote.

## Bazooka ATV-TUBE Troubleshooting Guide

### Solution:

Press the volume up  and the volume down  buttons on the ATV-TUBE to see if the beeping stops


### RL Units Only:

Unplug the ATV-TUBE. Remove the battery from the remote for 30 seconds. Reinstall the battery and plug the ATV-TUBE back in.

### How to remove and install the remote battery:

Remove the battery tray from the remote. To remove the battery tray push the small tab in and then pull out on the tray. (Fig. 1)

Reinstall the battery tray into the remote making sure the battery is facing the correct direction. (Fig. 1)

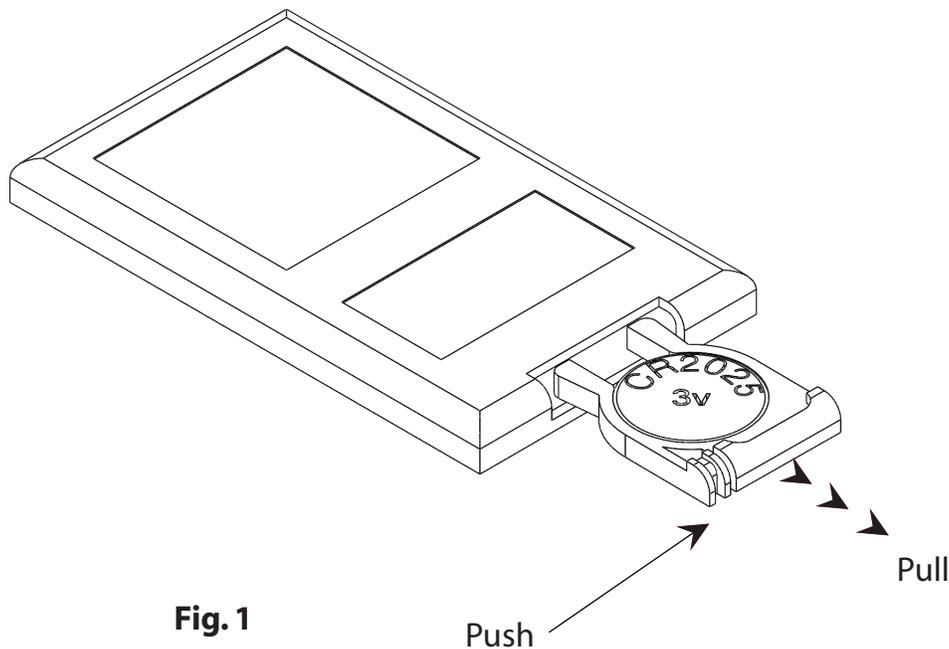

**Fig. 1**

### Symptom:

LED lights fade on and stays on, and the RF remote does not work.

We have found that the charging systems on some ATVs and UTVs produce voltage fluctuation and/or dirty voltage that interferes with the RF circuit in the ATV-TUBE

### Solution:

Contact SAS and we will send you an inline Power Stabilizer Filter that easily plugs into the main power wire to the ATV-TUBE and usually resolves this problem